

XRT86L34EVAL

EVALUATION SYSTEM

USER MANUAL

EVALUATION KIT PART LIST

This kit contains the following:

- XRT86L34EVAL Application Board
- XRT86L34 GUI Evaluation Software
- XRT86L34 225-ball TBGA
- XRT86L34EVAL User Manual
- XRT86L34 Datasheet

FEATURES

- FPGA Design Which Controls the Framer/LIU and Supports Communication Between the PCI Bridge and the XRT86L34
- PCI Bridge Connector for Easy Connection Through a Standard PC
- CD ROM Containing the GUI Software (Executable File)
- Line Interface Modules Coupled to the Receiver Inputs and Transmitter Outputs
- Power Supply Design Which uses the Supply Voltage From the PCI Bridge
- Accessible I/O Interface for Common Laboratory Equipment

SYSTEM CONFIGURATION-LAB SETUP

The XRT86L34EVAL application board is setup as a common test circuit. Figure 1 shows a simplified block diagram of the default test configuration.

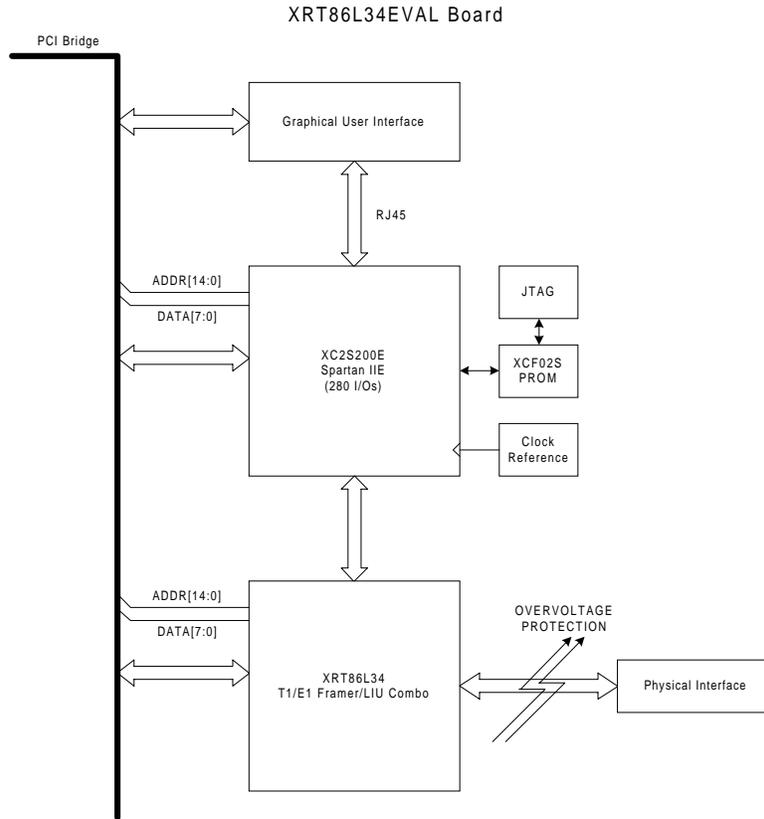


Figure 1 Simplified Block Diagram of the XRT86L34EVAL Application Board

APPLICATION CIRCUITRY

FPGA

The XRT86L34EVAL uses an FPGA designed to control the Framer/LIU and support communication between the PCI bridge and the XRT86L34. The FPGA chosen contains enough I/O pins to support all eight channels with one configuration. By default, the FPGA is configured into an FPGA loopback mode, whereby the output pins from the Framer block are internally looped back to the input pins. This allows standard network equipment connected to the physical interface to monitor data integrity through a complete communication path.

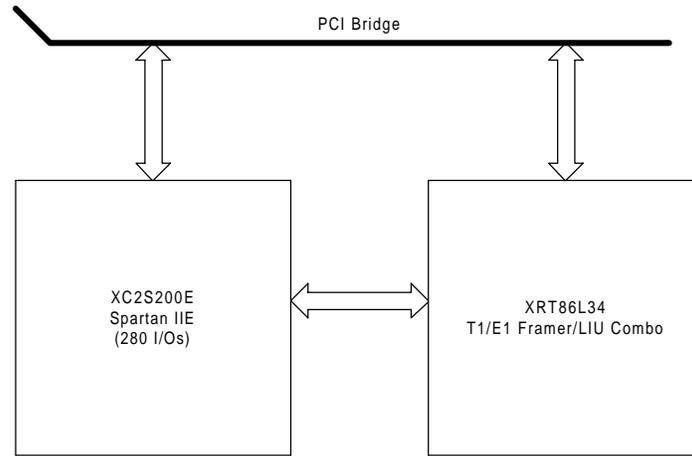


Figure 2 Simplified Block Diagram of the FPGA Interface

Line Interface Module

Internal Impedance

The XRT86L34 has the termination impedance inside the LIU. No termination resistors are necessary for the transmit outputs or the receive inputs. This allows the user to have one bill of materials for all three applications. Figure 3 is a simplified block diagram of the interface connection.


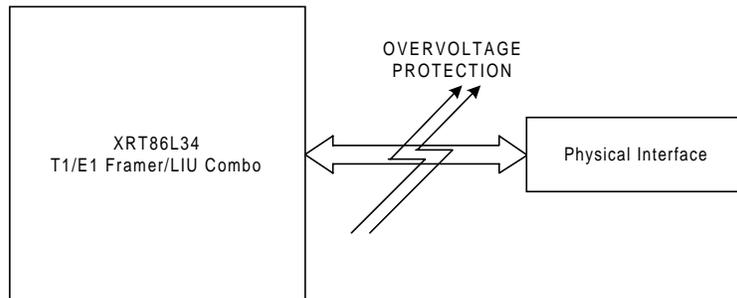


Figure 3 Simplified Block Diagram of the Interface Connection

GRAPHICAL USER INTERFACE (GUI)

INSTALLATION PROCEDURE

The CD ROM contains the necessary files in order to fully evaluate the XRT86L34 evaluation board. By clicking on the “xrt86l3x evaluation vXXX.exe” file, the GUI will automatically install all components. If properly installed, the GUI can be launched from “C:\Program Files\Exar\XRT86L3X Evaluation Software”. Once the GUI is launched, the user is given a choice to launch the GUI in either T1 or E1 mode.

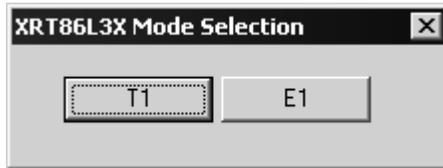

Selecting will load the T1 FPGA or the E1 FPGA, respectively. The user is then presented with this menu.




T1 TEST MENU

The Test menu contains the necessary GUI for testing Bit-Oriented Signaling, Message-Oriented Signaling, Robbed Bit Signaling and Alarm & PMON Monitoring. In order to test these features, it is necessary to place the device in a Framer Local Loopback or an External Loopback by shorting Ttip/Tring to Rtip/Rring through the RJ45 connectors. Also, one should deselect the FPGA loopback in “General Configuration” from the “Configuration” menu.



T1 BIT ORIENTED SIGNALING

In order to Test BOS, select the desired channel, select a framing format that supports BOS such as ESF and ensure Controller 1 and Data Link Bits are used. Then click Send.

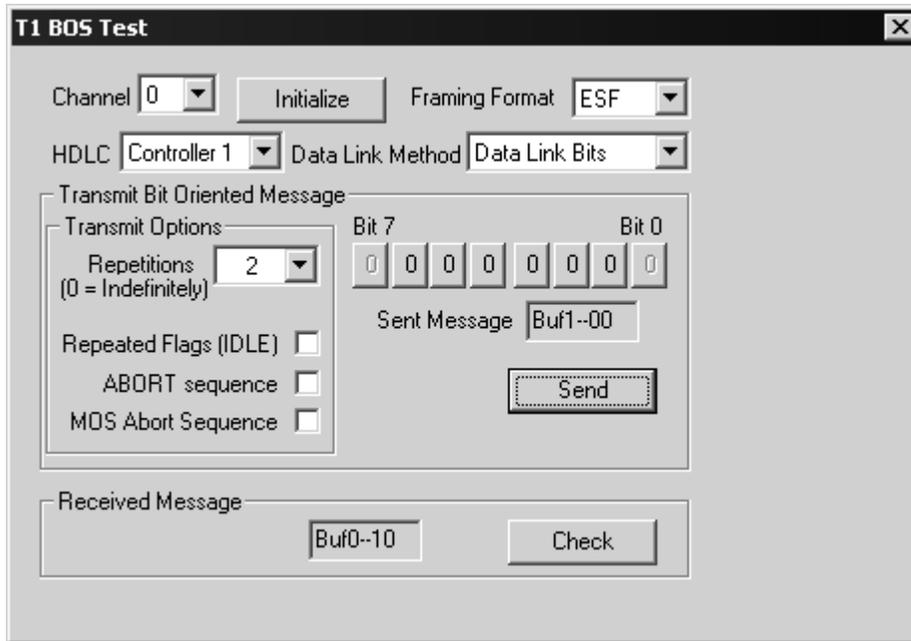


T1 MESSAGE ORIENTED SIGNALING

In order to Test MOS, select a framing format that supports MOS, select a Fill Pattern, select a TSLOT conditioning (note that D/E Timeslot can be used with practically all framing formats) and select a HDLC Controller (Controller 1 must be used when using Data Link Bits). Then click Start which begins the process of checking for received messages. Click Test to send the message.

T1 SLC96 Test

In Order SLC96, ensure the framing format is SLC96, modify the SLC96 message to your liking. Other settings can be left at default. Then click Send. Click Check to check for received messages.

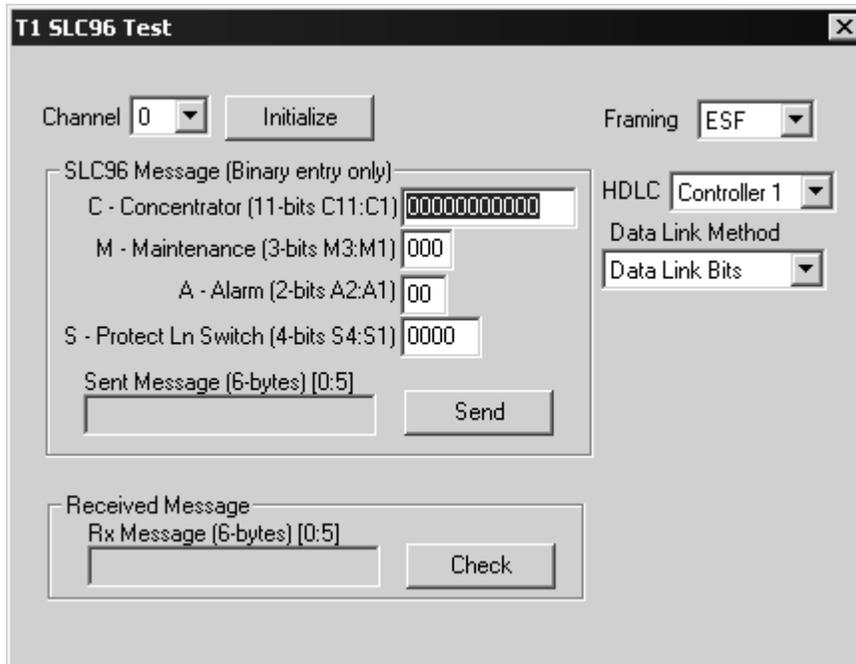


The screenshot shows a dialog box titled "T1 SLC96 Test" with a close button in the top right corner. The dialog is divided into several sections:


- Channel:** A dropdown menu set to "0" and an "Initialize" button.
- Framing:** A dropdown menu set to "ESF".
- SLC96 Message (Binary entry only):** A group box containing:
 - C - Concentrator (11-bits C11:C1):** A text box containing "00000000000".
 - M - Maintenance (3-bits M3:M1):** A text box containing "000".
 - A - Alarm (2-bits A2:A1):** A text box containing "00".
 - S - Protect Ln Switch (4-bits S4:S1):** A text box containing "0000".
 - Sent Message (6-bytes) [0:5]:** An empty text box with a "Send" button to its right.
- HDLC:** A dropdown menu set to "Controller 1".
- Data Link Method:** A dropdown menu set to "Data Link Bits".
- Received Message:** A group box containing:
 - Rx Message (6-bytes) [0:5]:** An empty text box with a "Check" button to its right.

T1 ROBBED BIT SIGNALING MENU

In order to Test RBS, select the desired channel, and then Subchannel (Time Slot) to be configured. Once the desired time slot is selected, the transmit signaling bits can be programmed. This menu is used in conjunction with the "T1 Specific" page from the "General Configuration Menu".

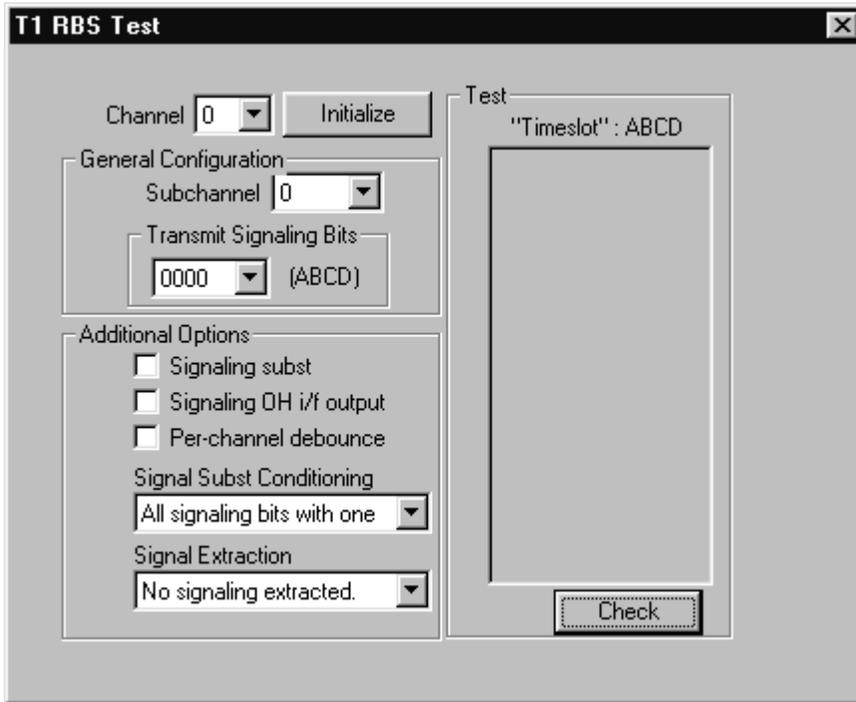


ALARM & PMON MONITORING

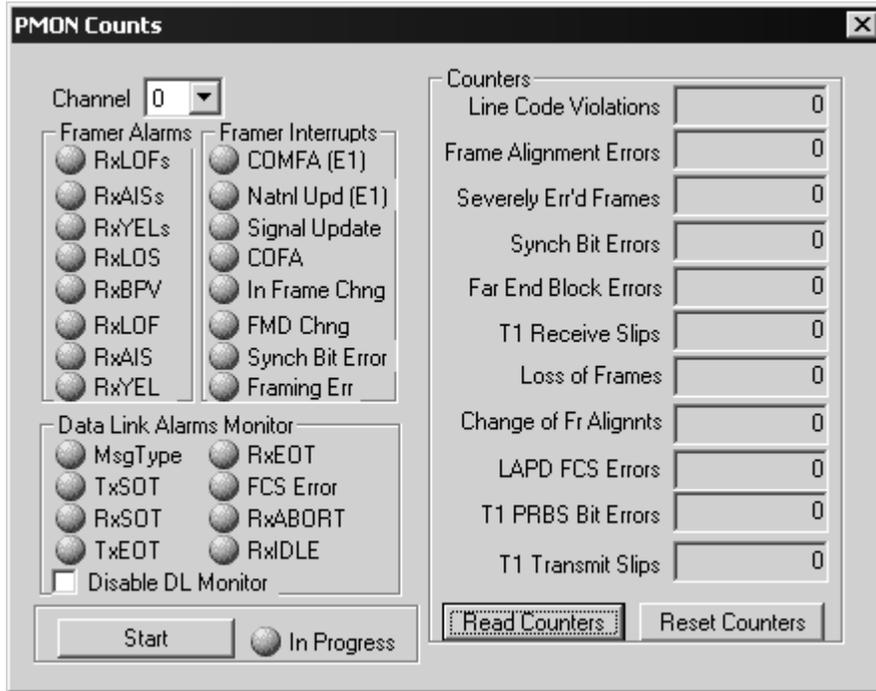


E1 TEST MENU

The Test menu contains the necessary GUI for testing Message-Oriented Signaling, CAS Signaling and Alarm & PMON Monitoring. In order to test these features, it is necessary to place the device in a Framer Local Loopback or an External Loopback by shorting Ttip/Tring to Rtip/Rring through the RJ45 connectors. Also, one should deselect the FPGA loopback in "General Configuration" from the "Configuration" menu.

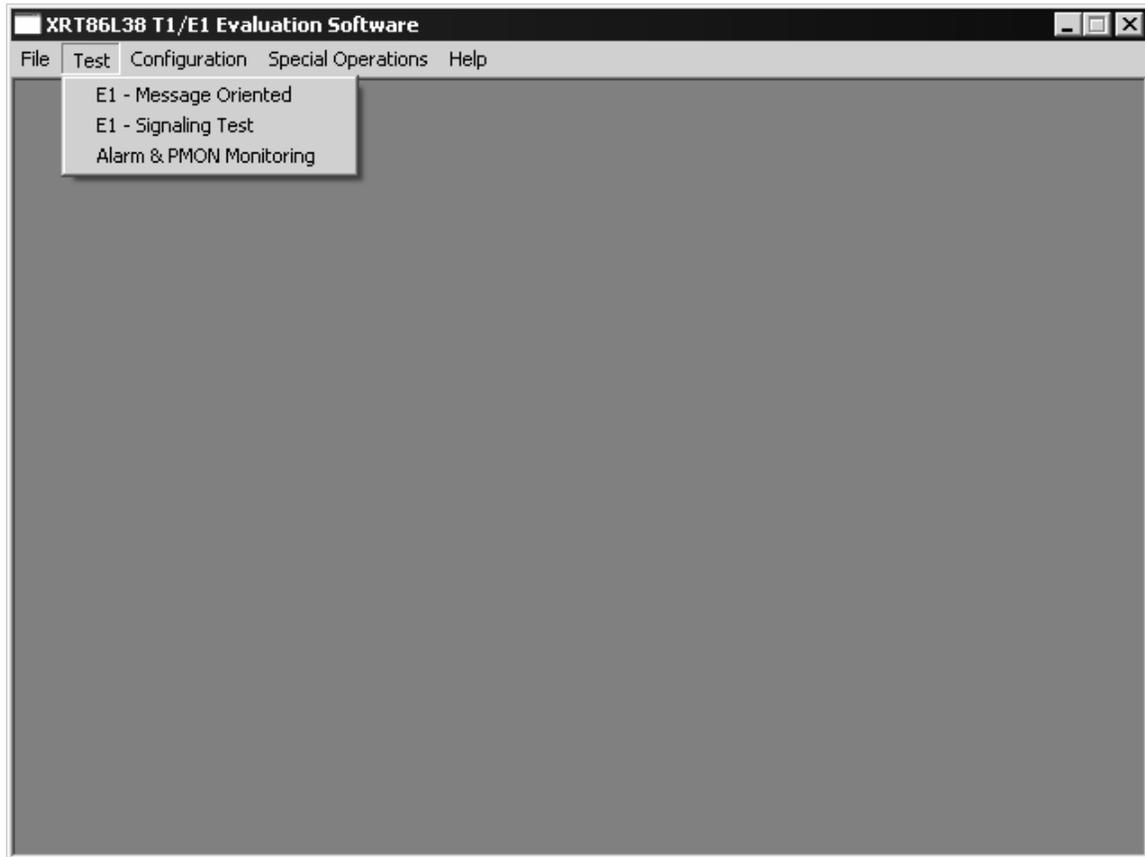


E1 MESSAGE ORIENTED SIGNALING

In order to Test MOS, select a framing format that supports MOS, select a Fill Pattern, select a TSLOT conditioning (note that D/E Timeslot can be used with practically all framing formats) and select a HDLC Controller (Controller 1 must be used when using Data Link Bits). Then click Start which begins the process of checking for received messages. Click Test to send the message.

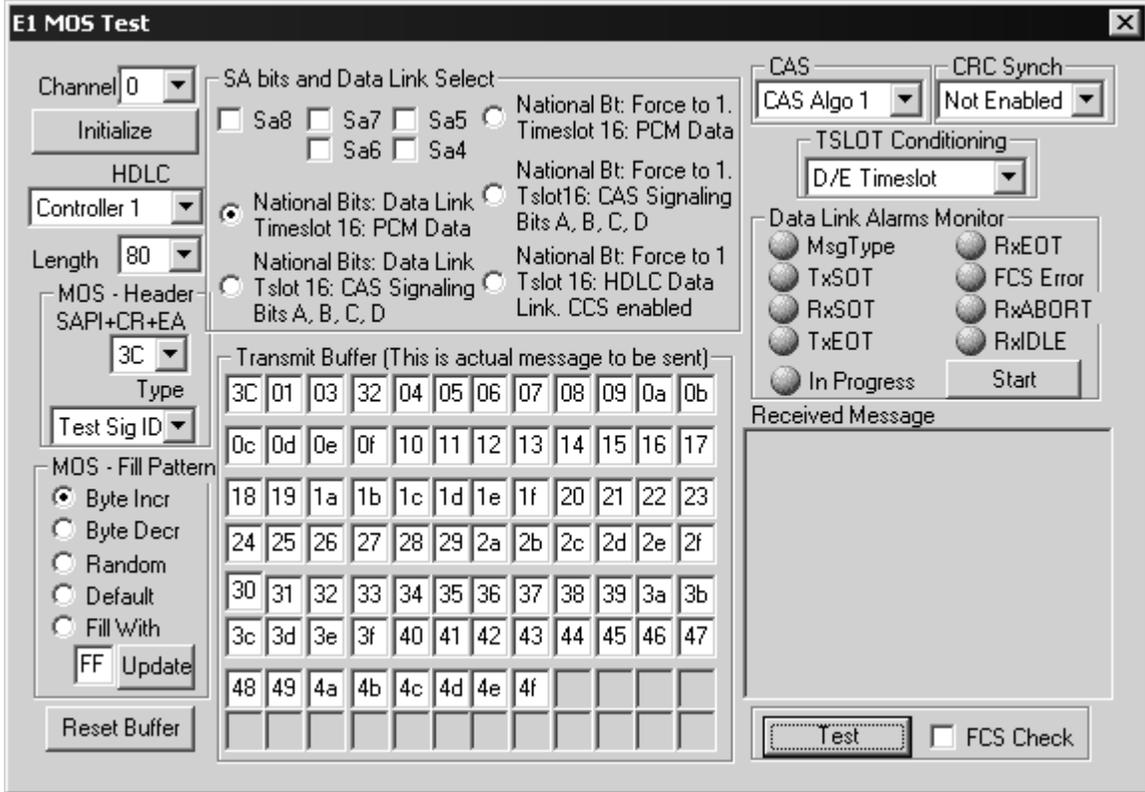


E1 SIGNALING TEST

In order to Test Signaling, select the desired channel, and then Subchannel (Time Slot) to be configured. Once the desired time slot is selected, the transmit signaling bits can be programmed. This menu is used in conjunction with the “E1 Specific” page from the “General Configuration Menu”.

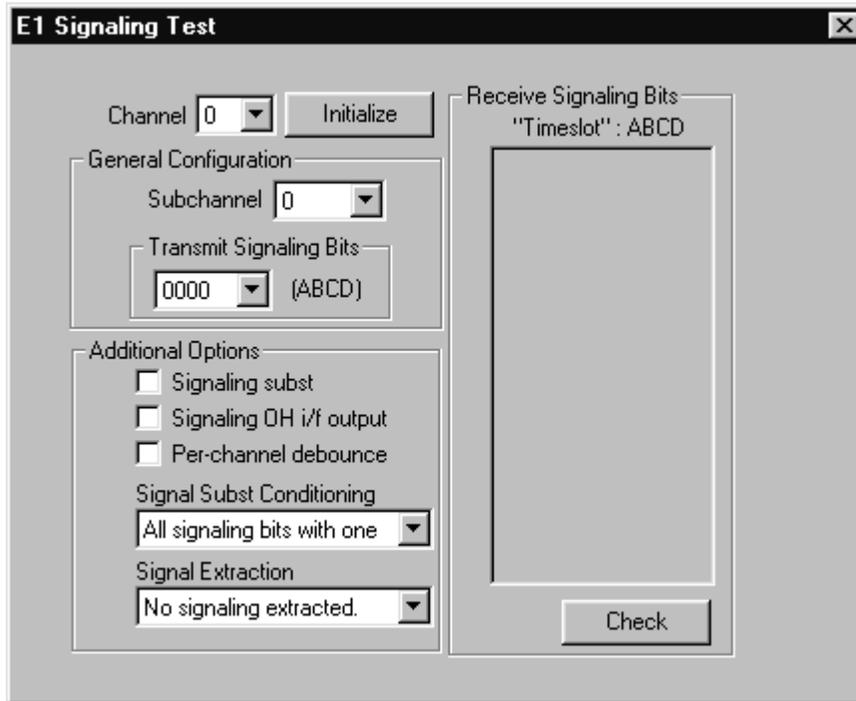

ALARM & PMON MONITORING

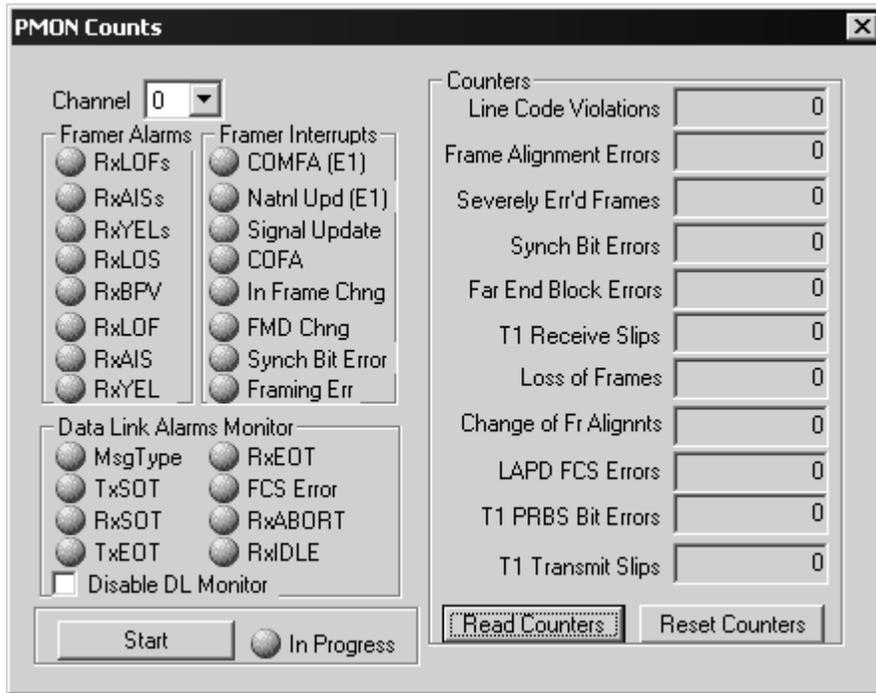

CONFIGURATION MENU

The Configuration menu allows the user to provision the device into common modes for the Framer and LIU sections of the combo chip.



Framer General Configuration [X]

Channel FPGA Loopback Enable T1/E1 Select E1 T1 Refresh

Control | Interrupts | Signalling | E1 Specific

Clock Select

- 8khz sync enable
- clock loss detection enable
- DSCClk Frequency:
- Clock Source:

Line Interface Control

- Force Transmit LOS

Loopback Select

- Transmit B8ZS Disable
- Receive B8ZS Disable


Alarm Generation


- AUXP generation (E1 only)
- LOF alarm enable
- Yellow Alarm:
- AIS generation:
- AIS detection:


PRBS Test


- PRBS QRTS Type
- Data Inversion
- Rx PRBS receive enable
- Tx PRBS generation enable
- Rx DS1 framer bypass
- Tx DS1 framer bypass

Refresh Modify/Apply

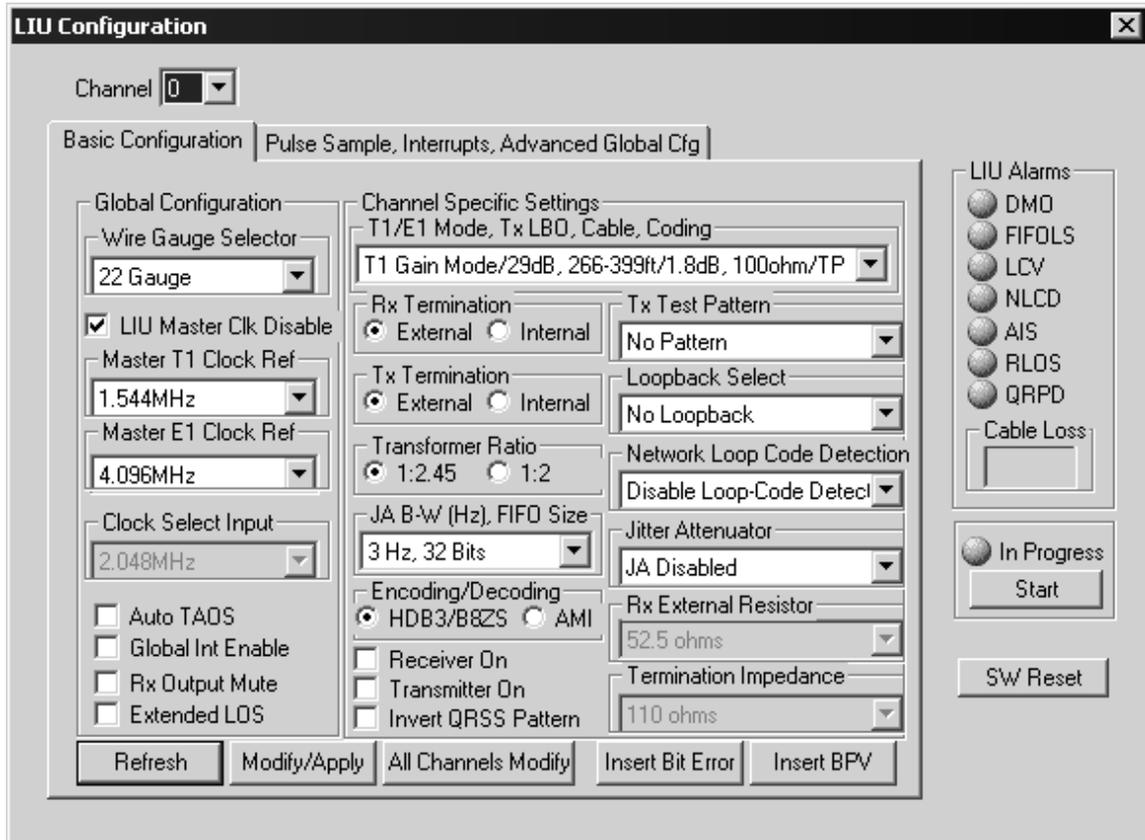

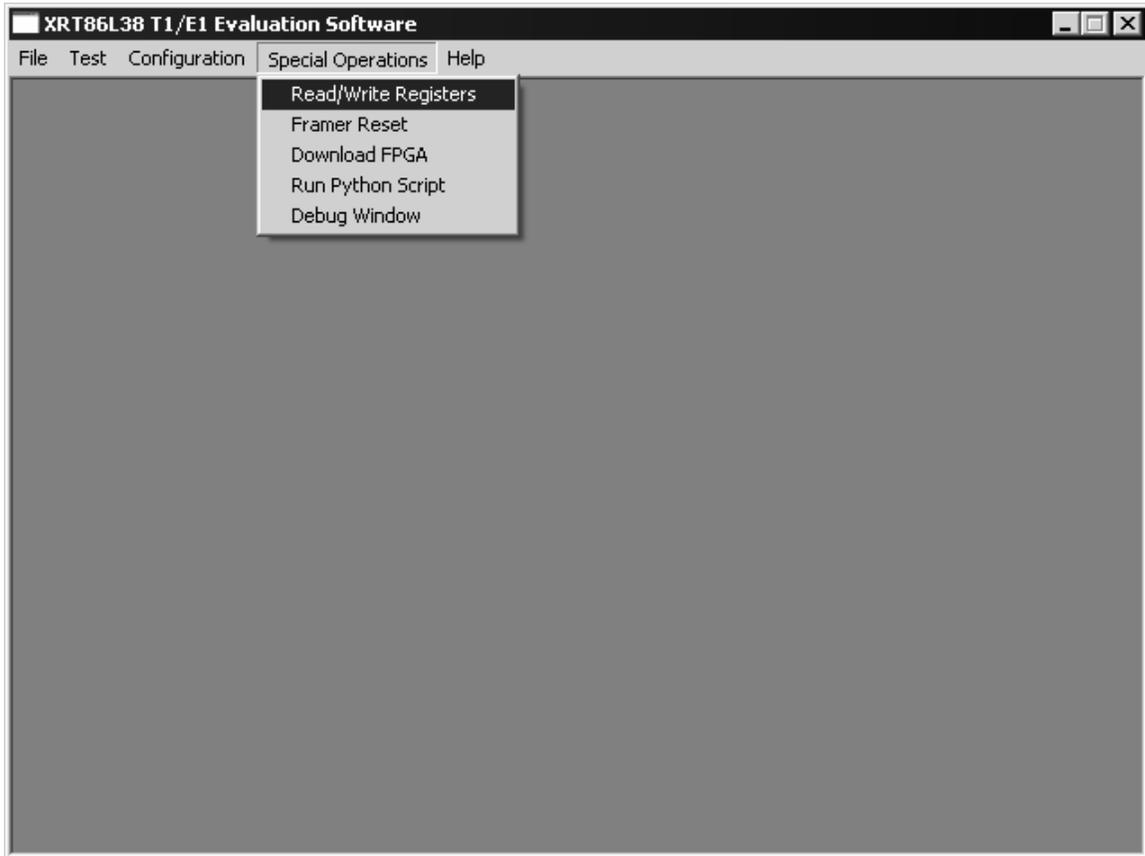

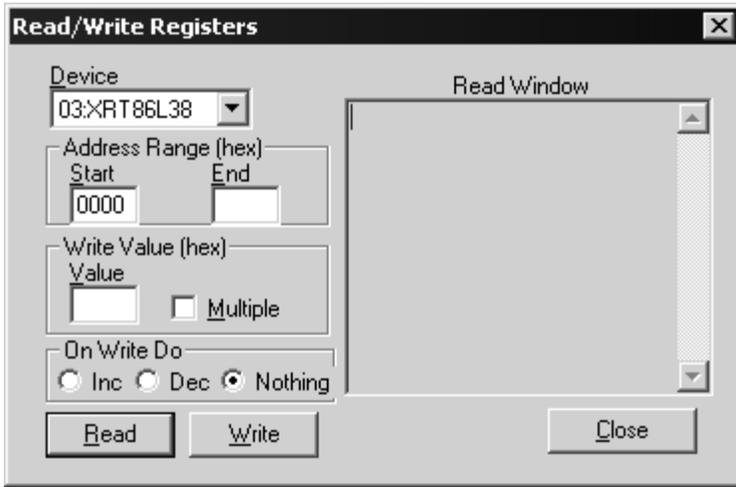

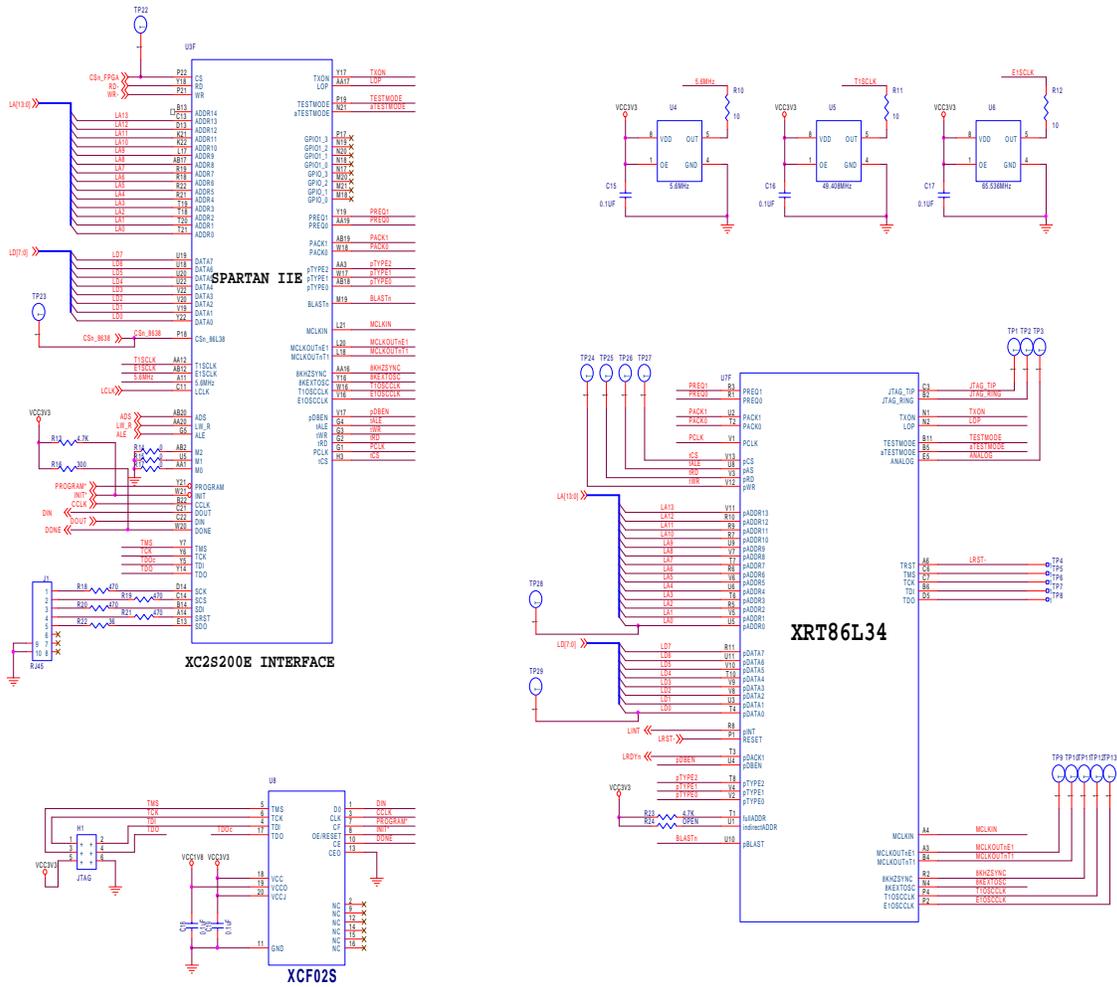

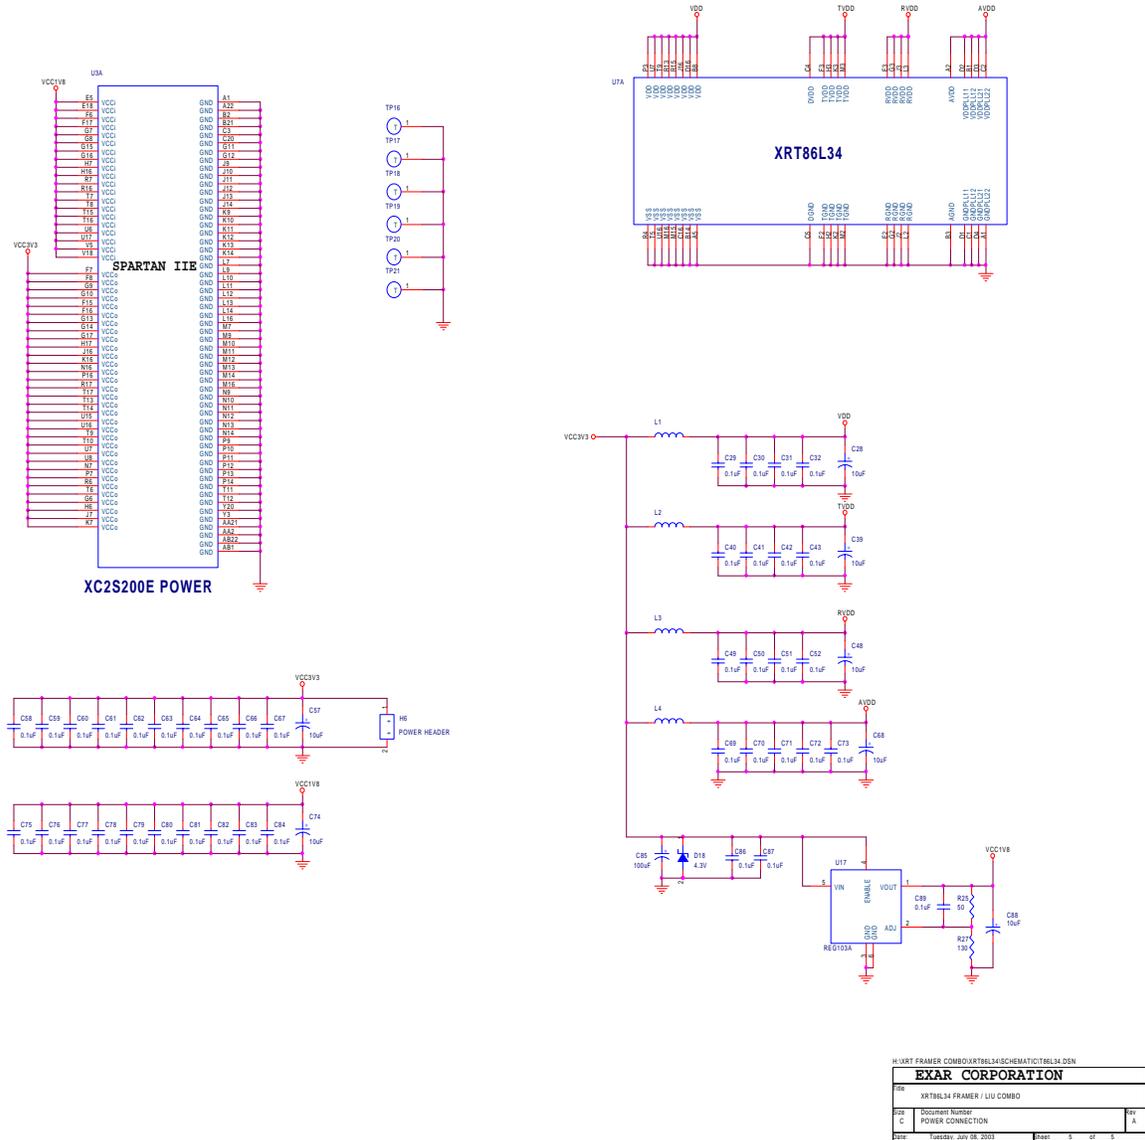


Figure 8 XRT86L34EVAL Power Supply Design (Schematic Page 5)

Layout Recommendations

RTIP/RRING Traces (Long Haul Applications)

The most critical traces are those routed for the receiver inputs in Long Haul applications, where the input may be attenuated up to -42dB of cable loss. The differential pair of each channel should be isolated from other signals on the PCB to prevent unwanted crosstalk or interference. TTIP and TRING transmit an output at full power (0 dB) and should be routed with at least 10 mil spacing away from the receive signals.

Center Tap Capacitor on the Transformer

For best performance, it is recommended that the center tap of the receive transformer be bypassed to ground with a 0.1 μF capacitor if a center tap is available. The capacitor will help filter out noise that otherwise could be AC coupled from the line interface through the transformer.

TVDD

Transmit Analog Power Supply (3.3V $\pm 5\%$)

TVDD can be shared with DVDD. However, it is recommended that TVDD be isolated from the analog power supply RVDD. For best results, use an internal power plane with copper pour separation. If an internal power plane is not available, a ferrite bead can be used. Each power supply pin should be bypassed to ground through an external 0.1 μF capacitor.

RVDD

Receive Analog Power Supply (3.3V $\pm 5\%$)

For long haul applications, RVDD should not be shared with other power supplies. It is recommended that RVDD be isolated from the digital power supply DVDD and the analog power supply TVDD. For best results, use an internal power plane with copper pour separation. If an internal power plane is not available, a ferrite bead can be used. Each power supply pin should be bypassed to ground through an external 0.1 μF capacitor.

Note: In long haul applications where the receive inputs can be severely attenuated, it is critical to have a clean power supply design and clean PCB layout with respect to RVDD. It is highly recommended that RVDD be isolated from DVDD and TVDD.

DVDD

Digital Power Supply (3.3V $\pm 5\%$)

DVDD should be isolated from the analog power supplies. For best results, use an internal power plane with copper pour separation. If an internal power plane is not available, a ferrite bead can be used. Every two DVDD power supply pins should be bypassed to ground through at least one 0.1 μF capacitor.

AVDD

Analog Power Supply (3.3V $\pm 5\%$)

AVDD should be isolated from the digital power supplies. For best results, use an internal power plane with copper pour separation. If an internal power plane is not available, a ferrite bead can be used. Each power supply pin should be bypassed to ground through at least one 0.1 μF capacitor.

GND

It's recommended that all ground pins of this device be tied together at one common ground point.